


Kombo Handle Installation Instructions

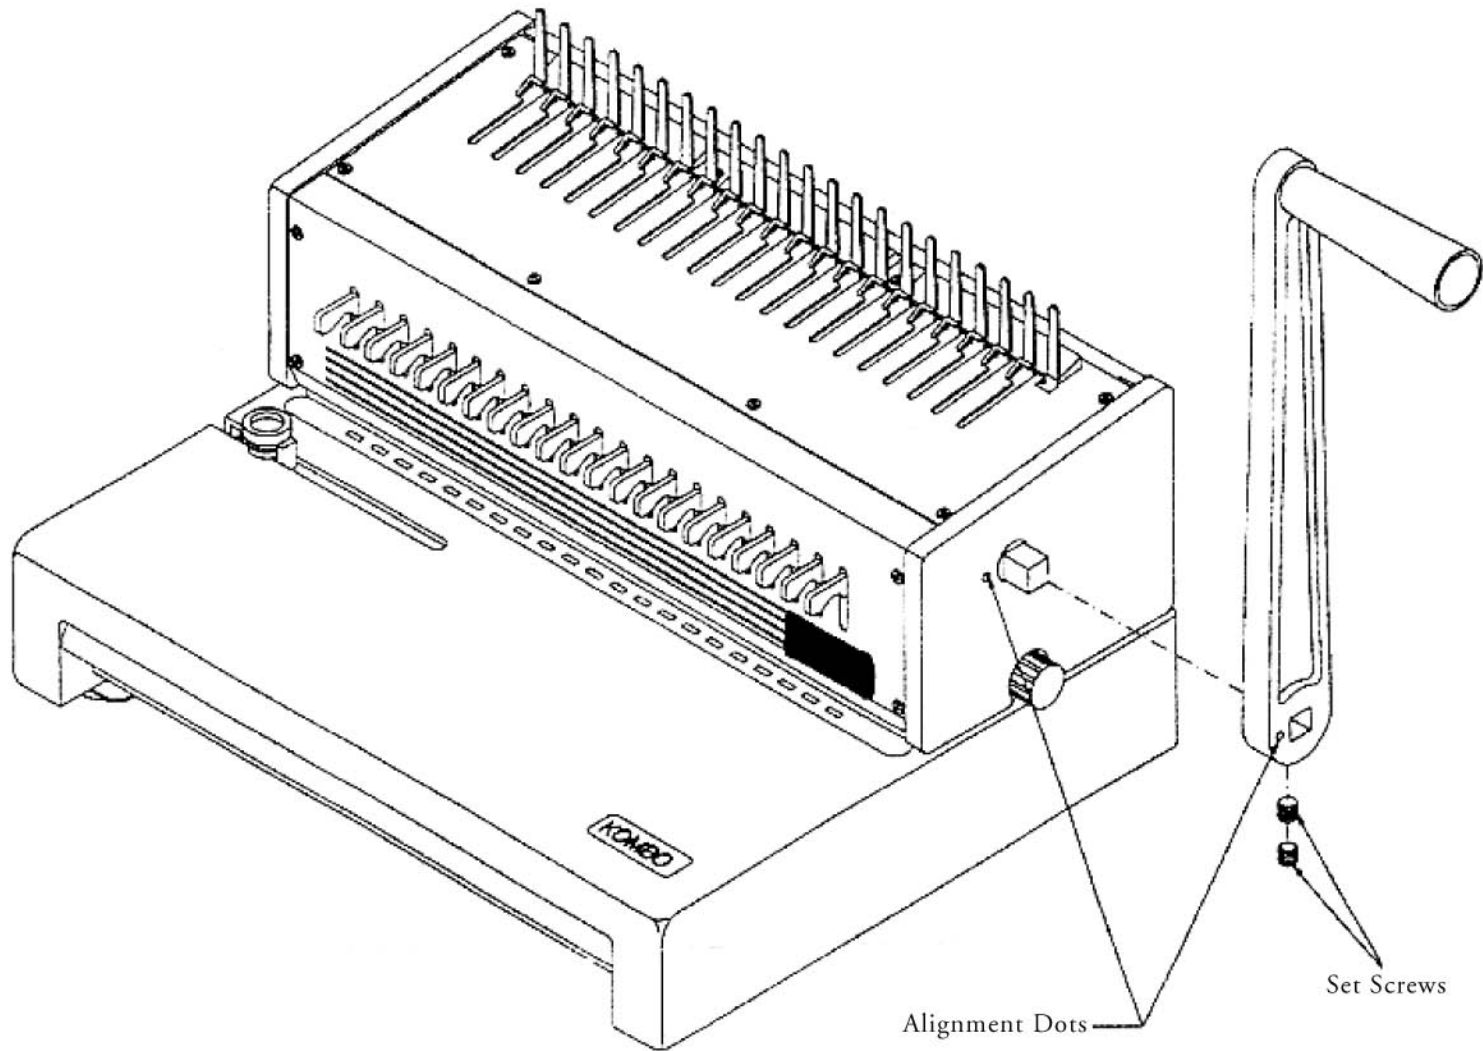

- 1) In its vertical position, slide the handle onto the main shaft protruding from the right side of the machine, matching the alignment dots as shown above.
- 2) Two set screws are used to secure the handle. Rotate handle to the rear of the machine. Using the Allen wrench included, remove the first set screw from the handle and tighten the inner set screw to the shaft. Replace and tighten the first set screw to complete installation.



Advanced Document Systems & Supply, Inc.
PHONE: 800-808-2377 FAX: 888-237-732
www.adss.net